Santa Cruz V1 Megatower LT Link Install

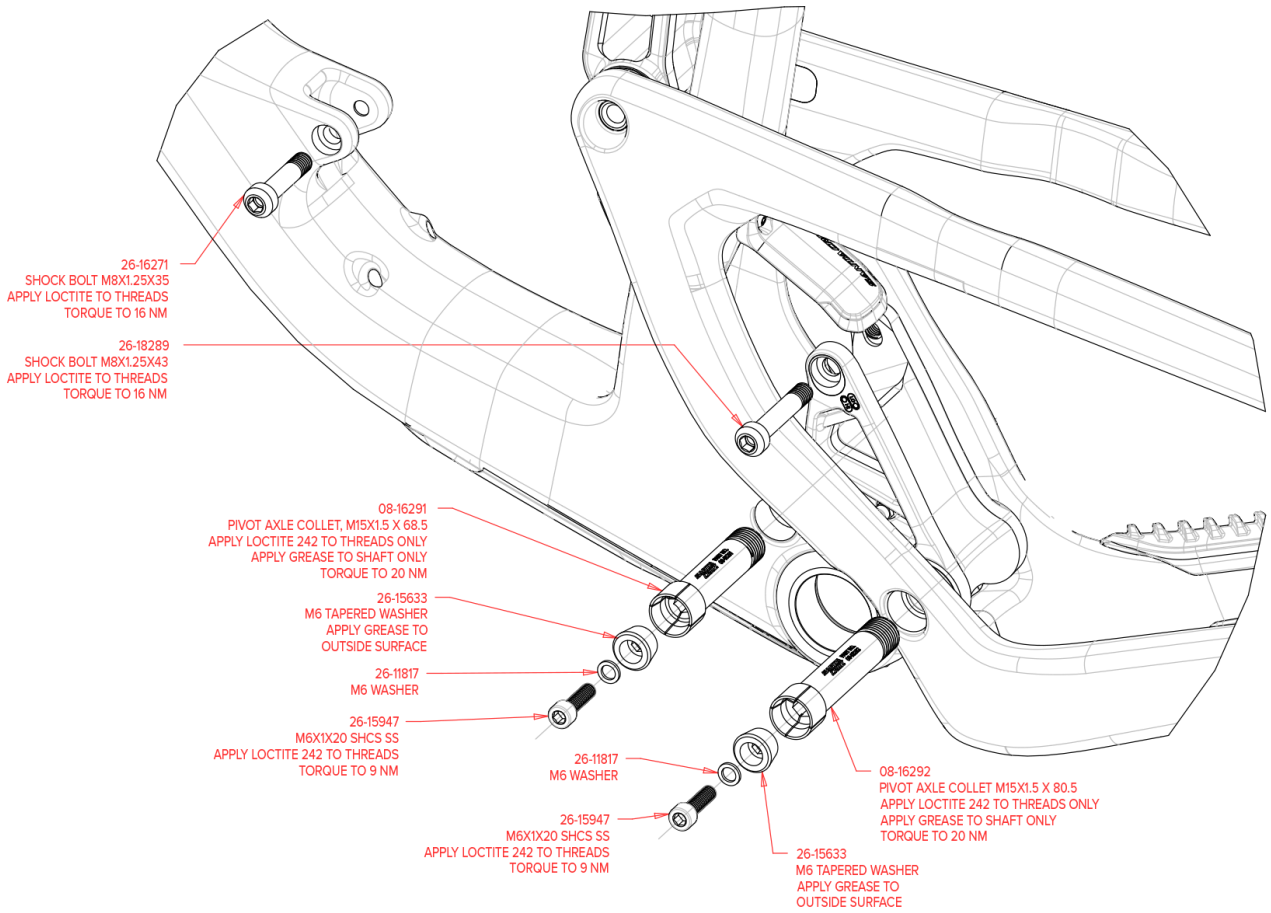

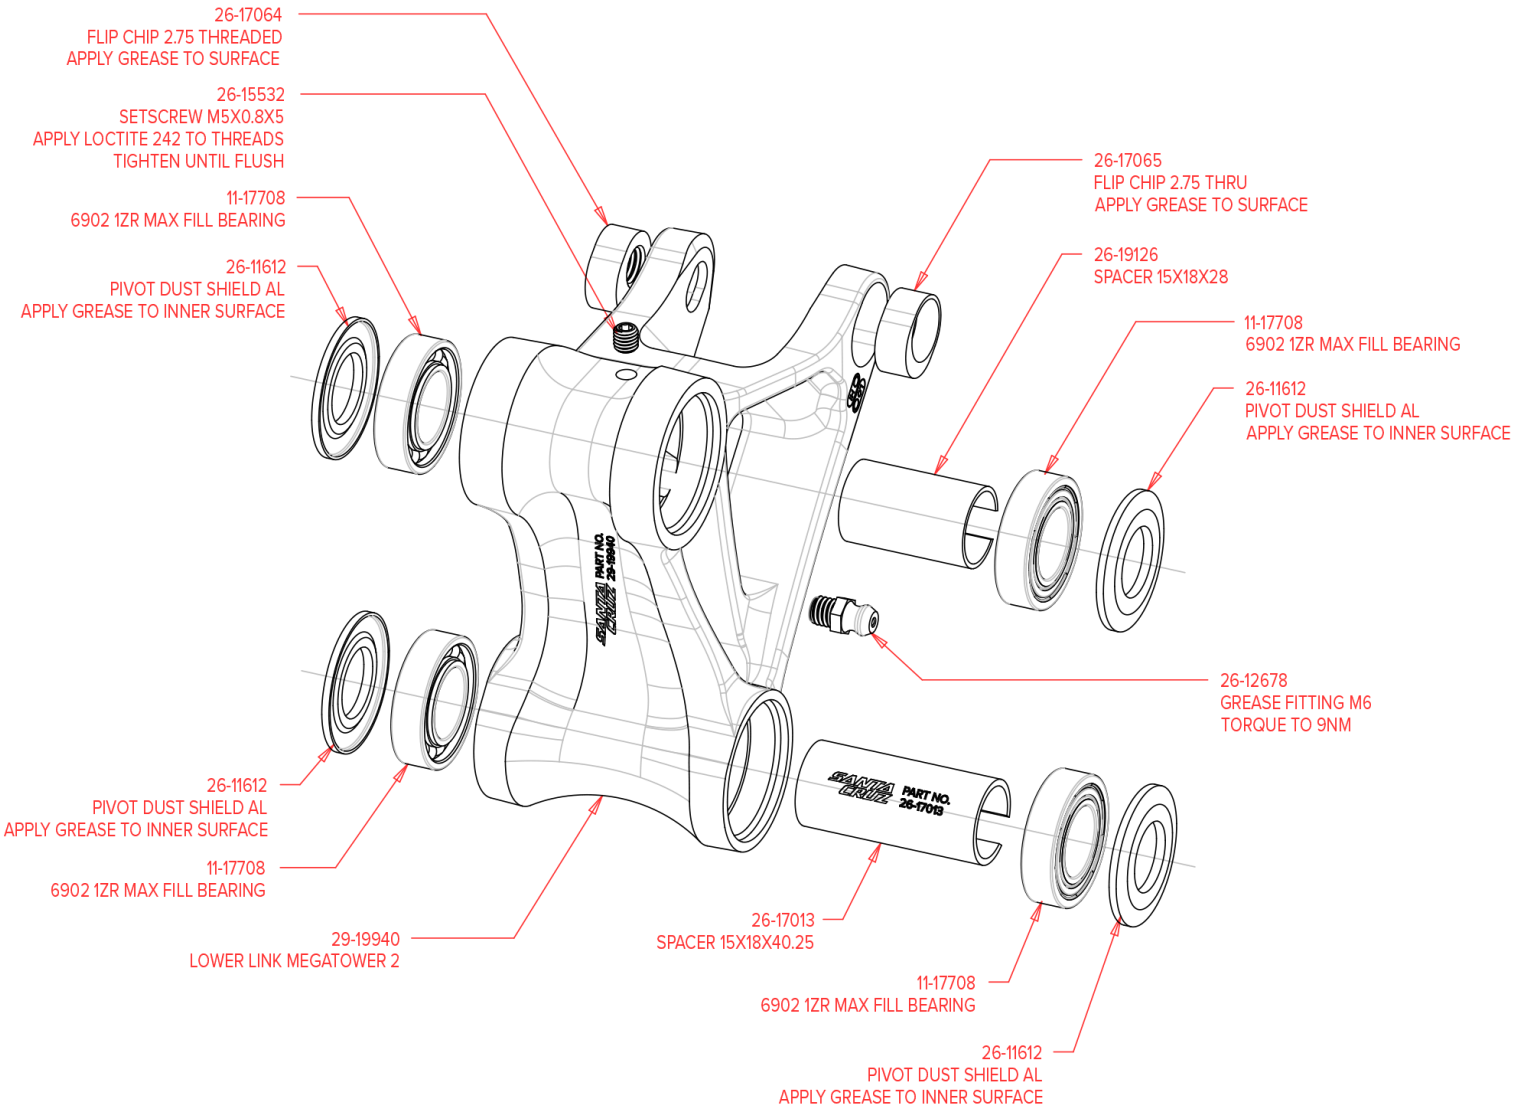
26-17064
FLIP CHIP 2.75 THREADED
APPLY GREASE TO SURFACE
26-15532
SETSCREW M5X0.8X5
APPLY LOCTITE 242 TO THREADS
TIGHTEN UNTIL FLUSH
11-17708
6902 1ZR MAX FILL BEARING
26-11612
PIVOT DUST SHIELD AL
APPLY GREASE TO INNER SURFACE
26-17065
FLIP CHIP 2.75 THRU
APPLY GREASE TO SURFACE
26-19126
SPACER 15X18X28
11-17708
6902 1ZR MAX FILL BEARING
26-11612
PIVOT DUST SHIELD AL
APPLY GREASE TO INNER SURFACE
PART NO. 29-19940
26-12678
GREASE FITTING M6
TORQUE TO 9NM
26-11612
PIVOT DUST SHIELD AL
APPLY GREASE TO INNER SURFACE
11-17708
6902 1ZR MAX FILL BEARING
PART NO. 26-17013
29-19940
LOWER LINK MEGATOWER 2
26-17013
SPACER 15X18X40.25
11-17708
6902 1ZR MAX FILL BEARING
26-11612
PIVOT DUST SHIELD AL
APPLY GREASE TO INNER SURFACE